

The Design Methodology Guide

Table 2 - TV Device Page



(Except Hard Buttons)

| Device | Typical Pages & Order | Notes |
|--------|--|---|
| TV | Inputs | This page or pages, will house all of the necessary Inputs selections for your TV. Look in your TV manual for a complete listing and/or follow your OEM remote control. |
| TV | Setup | Locate any controls here for Brightness, Contrast, Color, etc. here |
| TV | Channels | Reserved for your local channel logos, cable channels, DirecTV, Dish TV, etc. Plenty of logo's available on RemoteCentral.com. Any local channel logos you may need can be captured from the station's web site. If you use a cable or satellite box and you do not use the TV tuner to change channels, this may be eliminated here. If not, you might wish to make this your Main page. |
| TV | Pip | If your TV has Pip/Pop, than the buttons for these actions will be located here. |
| TV | Digits | Locate your buttons 0-9. If your unit has 10, 10+, add these as well. Include necessary keys such as Enter, Select, or any keys that will complete a process, etc. Example, 123 <Enter>. This same Digits page can be used within every device that requires these buttons. Copy the page to each Device which require numbers and then change the "Links" to each Device's IR page. |
| TV | - | Hard button Recommendations |
| 1-4 | Frequently used buttons for your cable or Sat, to navigate menus, etc. | <p>Backlight 18 Page Up 19 Page Down 20</p> <p>13 Channel + 14 Channel - 15 Mute 16 Volume + 17 Volume -</p> <p>Up, Down Left, Right</p> |
| 5 | Menu control | |
| 6 | Toggle | |
| 7 | Open | |
| 8 | Enter, Select or OK | |
| 9-12 | Home | |
| | Menu Controls | (If you use an amp or receiver, Buttons 15-17 control it, otherwise they control the TV volume, mute) |