



### Hard Buttons Tab (See Figure 5)

Hard buttons are the physical buttons on the face and the sides of your Pronto. In the TSU3000/7000, there are 20 hard buttons and you can all but one. You can choose how to assign actions to these buttons, by Device. You will notice this screen looks a lot like the Actions Screen and they do serve the same basic function. The earlier Actions screen is used to program your “Soft” buttons. We refer to “Soft” buttons as buttons which display on the LCD screen.

This screen is used to program all of the hard buttons. You will notice in **Figure 5**, the hard buttons have a greenish color to them, indicating they can be programmed.

Any hard button can do just about anything you wish. In **Figure 5**, when you are adding Actions or IR Codes to a hard button, you click on the button and it will become highlighted distinctly and you can use any of the buttons on the right to add something to that hard button, be it an IR Code, Link, Jump, Beep, etc.

Figure 5 – Device Properties – Hard Buttons Tab

